


Pin	Function	Color
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24	Injector 3 (LP)	
25	Injector 1 (LP)	
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45	Injector 4 (LP)	
46	Injector 2 (LP)	
47		
48		
49	G247 - Fuel high pressure sender (EGO2 - ADC12)	
50	G410 - Fuel Low Pressure Sender (EXT_MAP - ADC11)	
51	G42/G71 - Intake air temperature sender	
52	G42/G71 - MAP sender (Port EGO)	
53		
54		
55		
56		
57		
58		
59		
60		
61		
62		
63		
64		
65		
66		
67		
68		
69		
70		
71		
72		
73		
74		
75		
76		
77		
78		
79		
80		
81		
82		
83		
84		
85		
86		
87		
88		
89		
90		
91		
92		
93		
94		
95		
96		
97		
98		
99		
100		
101		
102	SPARK E	
103	SPARK F	
104		
105		

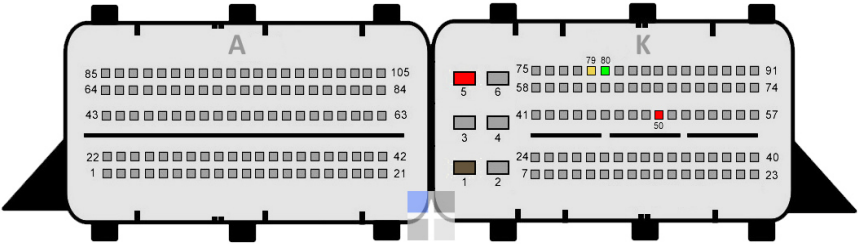

Onboard MAP sensor: Port MAP

Yellow	Outputs (programmable)
Orange	Analog 0-5V Inputs
Grey	Digital Inputs (ground to activate)
Light Blue	Wideband
Green	Ignition Outputs (5v)

Pin	Function	Color
1	GROUND	
2	GROUND	
3		
4		
5	12v from main relay (J271)	
6	12v from main relay (J271)	
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40	Turbo Speed Input (PE0)	
41		
42		
43		
44		
45		
46		
47		
48		
49		
50		
51		
52		
53		
54	SPARE ANALOG 1 (Sensor 09 - CANADC09)	
55	SPARE ANALOG 2 (Sensor 10 - CANADC10)	
56	SPARE ANALOG 3 (Sensor 11 - CANADC11)	
57	SPARE ANALOG 4 (Sensor 12 - CANADC12)	
58	LSU 4.9 Wideband H+	BR - 4
59	FLEX fuel input (PE2 Flex)	
60		
61	LSU 4.9 Wideband UN	B - 6
62	DIGITAL IN 1	
63	DIGITAL IN 2	
64	DIGITAL IN 3	
65	DIGITAL IN 4	
66		
67		
68		
69		
70		
71		
72		
73		
74	BOOST Output	
75	LSU 4.9 Wideband H-	W - 3
76	LSU 4.9 Wideband IP	R - 1
77	LSU 4.9 Wideband VM	OR - 2
78	LSU 4.9 Wideband RT	G - 5
79	CANH	
80	CANL	
81	INJ E	
82	INJ F	
83	INJ G	
84	INJ H	
85		
86		
87		
88		
89		
90		
91		